

FROM 150 to 300A



FROM 450 to 800A




GENERAL DESCRIPTION

- Revo S has been specifically designed for OEM. This product can be costumized
- These simple units can be connected with REVO PC to manage multizone system this minimize your energy cost by controlling synchronization and power limit on each zone
- All circuit board, fuses and Thyristor can be inspected just opening front doar
- Input signal: SSR, Analog as an option
- Zero Crossing, Burst Firing available at 4, 8 or 16 Cycles at 50% Power demand
- Electronic circuit fully isolated from power with constant current drain on input.
- Heater Break alarm option to diagnose partial or total load failure and Thyristor Short circuit
- Internal fixed fuses are standard
- Current transformer integrated (with Heather Break option)
- Special design for Heat sink with very high dissipation value
- Comply with EMC, cUL (pending)
- Panel Mounting
- IP20 Protection available as an option

TECHNICAL SPECIFICATION

Voltage power supply	24V minimum to 480V, 600V and	d 690V on req	uest
Voltage Frequency	50 or 60 Hz no setting needed fr	rom 47 to 70 H	Ηz
Nominal Current	150A - 210A - 300A - 450A - 800	A	
Input Signal	Voltage input	4:30Vdc 0:10Vdc 0:20/4:20mA	5mA Max (On ≥ 4Vdc Off ≤ 1Vdc); impedance 15 K ohm; impedance 100 Ohm;
Firing	Zero Crossing, Burst Firing with a	nalog input si	gnal only
Auxiliary Voltage Supply	90:130Vac 8VA Max 170:265Vac 8VA Max (Standard) 230:345Vac 8VA Max 300:530Vac 8VA Max 510:690Vac 8VA Max (Standard)		
Heather Break Alarm	Microprocessor based with autor	matic setting D	igital Input, Relay Output 0,5A at 110V (option)
Mounting	Panel Mounting		
Operating Temperature	40 °C without derating. Over this	temperature s	see below derating curve
Storage temperature	-25 °C to 70 °C Max		
Altitude	Over 1000 m of altitude reduce t	the nominal cu	rrent of 2% for each 100m
Humidity	From 5 to 95% without condens	e and ice	

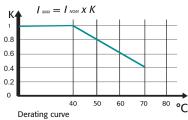

OPTION'S FEATURES AND SPECIAL DETAILS

HEATER BREAK ALARM HB


ON FRONT CABINET




FEW SECOND TO SET AND CALIBRATE ALL THE UNITS

- Microprocessor based circuit
- Capacity to diagnose the failure of one Resistance over five in parallel
- Load failure alarm with LED indication on front unit
- Thyristor short circuit alarm with LED indication on front unit
- Alarm output with free voltage relay contact
- Alarm reset function and possibility to auto reset if the alarm disappear
- Built in Current transformer when heather Break option has been selected
- Self Setting via external command or push button on front unit
- Commom setting command can be given to many units and in a matter of second, the tuning is done, also by a non expert operator


HOW TO ADD POWER LOAD MANAGMENT AND FEATURES TO YOUR SIMPLE UNITS



APPLICATION WITH 8, 16 OR 24 THREE-PHASE LOADS



WITHOUT POWER CONTROL OPTI-MISATION



WITH POWER CONTROL OPTIMISA-TION Use REVO-PC and you can add these Features

- Communication with different field bus
- Reading of current Voltage and Power
- Istantaneus power very close to average value, no pick power
- Power factor close to one no harmonics
- Prevents increase in energy supply tariffs imposed by your electricity supplier

Synchronization

On all controlled zones, REVO-PC Synchronization is automatic resulting in superior performance:

- Total current is equal to a sinusoidal wave form.
- Power factor > 0,9.
- Instantaneous current close to average value.
- Cancellation of harmonics.
- Flickering effect removed.

Smart power limitation

- Smart power limitation works together with synchronization. If this function is enabled, REVO-PC makes a live calculation of power at each period and generates the output values for the next period. If the calculated power is below the power limit value, the previous values remain with each channel using full power.
- If the power is above the power limit value, the setpoint of each channel is reduced proportionally to restrict power overshoot. This function significantly reduces disturbances on the main network compared to a full power system, preventing any increase in energy tariffs imposed by the electricity supplier.
- This function can be activated/deactivated and the limit value changed at any time.

APPLICATIONS AND FOCUS ON:


Autoclaves.

Fournaces.

Dryers

Chemical

WIRING CONNECTION CUSTOM 2PH from 150A to 800A

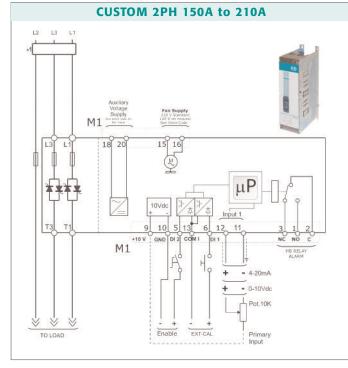

LOAD TYPE

T2 ¥

тз ¥

Resistive or

Long and


Infrared Lamps

medium waves

LOAD TYPE STAR without neutral


DELTA Resistive or Infrared Lamps Long and medium waves

Т3 У.

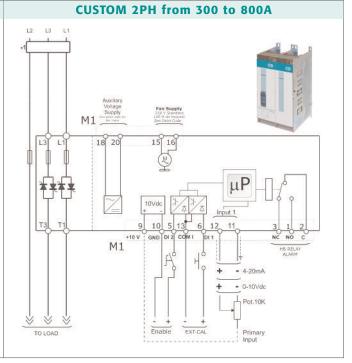

NOTE

- (1) A suitable device must ensure that the unit can be electrically isolated from the supply, this allows the qualified people to work in safety.
 - The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The semiconductor fuses are classified for UL as supplementar protection for semiconductor.
- (2) The heat-sink must be connected to the earth.
- (3) Only for the HB option

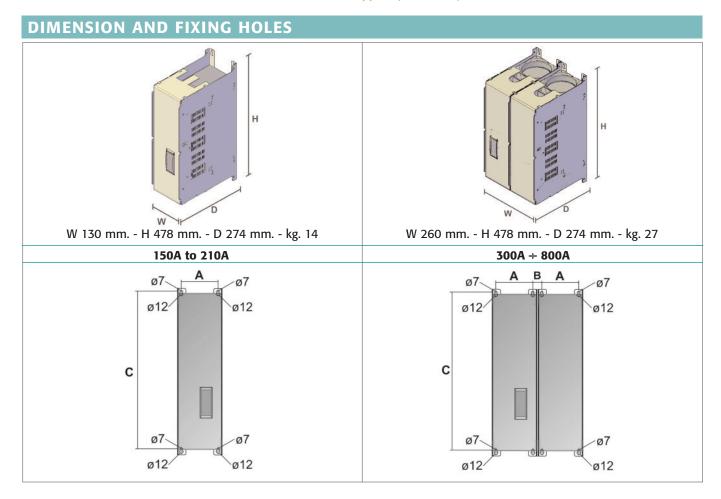

OUTPL	JT FEATU	RES (pow	/ER DEVICE	E)						
Current A	Voltage range (V)	reverse	ve peak voltage (600V)	Latching current (mAeff)	Max peak one cycle (10msec.)	Leakage current (mAeff)	I2T value for fusing tp=10msec.	Frequency range (Hz)	Power loss I=Inom (W)	Isolation Voltage Vac
150/210A	24÷600V	1200	1600	300	4800	15	108000	47÷70	623	2500
300A	24÷600V	1200	1600	200	7800	15	300000	47÷70	875	2500
450A	24÷600V	1200	1600	200	7800	15	300000	47÷70	1021	2500
550A	24÷600V	1200	1600	1000	17800	15	1027000	47÷70	1178	2500
800A	24÷600V	1200	1600	1000	17800	15	1027000	47÷70	1425	2500

Fan Specification	
Supply: 230V Standard	Input Power 17W
Supply: 115V Option	Input Power 14W

ORDERING CODE CUSTOM 2PH from 150 to 800A

		1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	16		
CUSTOM	2PH	C	2	_	_	_	_	-	_	_	_	_	_	_	_	_	_	_		
4,5,6 Cur	rent	8	B	Cont	rol Me	ode		10		Firi	ng			13	F	an Vo	ltage			
Description code	Numeric code	1	Descript	ion code	N	umeric o	ode	Des	cription	code	Num	eric cod	e	Descri	iption co	ode	Numeri	c code		
150A	0150		90:13	OV <mark>(3)</mark>		1		Zer	o Crossi	ng <mark>ZC</mark>		Z		Fa	n 110V		1			
210A	0210		170:26	5V <mark>(3)</mark>		2			Burst Firi					Fan 220	OV Stan	dard	2			
300A	0300		300:53	OV (3)		5			les On			- (-)		14		-				
450A	0450		510:69	OV (3)		6 Power Demand		-	4 (2)		14 Appro		Appro	ovals						
550A	0550		600:76	OV (3)		7		Burst Firing 8 Cycles On at 50%					Description code		ode	Numeric code				
800A	0800								wer Der			8 <mark>(2)</mark>		C	E EMC		0			
7 Max Vo	oltage	9	9		nput				Burst Firi			u (1)								
			Descript	ion code	N	umeric	code	16 Cycles On at 50%								15		Manual		
Description code	Numeric code			SR		s		Po	wer Der	nand		6 <mark>(2)</mark>		Descr	iption co	ode	Numeri	c code		
480V 600V	<u>4</u> 6		-	IOV		V									None		0			
690V	7		4:2	OmA		Α		11		Control	Mod	8			n Manu		1			
6907	1							Des	cription	code	Num	eric cod	e _		sh Manu		2			
								(Dpen Lo	ор		0			an Man		3			
LEGEND IFH = Integrated Fuse +	Euco Holdor								•	•			<u> </u>	Frend	ch Manu	ial	4			
IF = Integrated Fuse + I IF = Internal Fixed Fuse CT = Current Transform	2							12		Fuse &	Optio	n		16		Versi	on			
HB = Heater Break Alarr								Des	cription	code	Num	eric cod	e	Descr	iption co	ode	Numeri	c code		

Note (1): Load voltage must be included in Selected Auxiliary Voltage Range

0	рептоор	0				
12	Fuse & (Option				
Desc	ription code	Numeric code				
Fixed F	uses Standard	F				
Fixed	Fuses + CT	Y				
Fixed Fu	ises + CT + HB	Н				

English Manual	2			
German Manual	3			
French Manual	4			
16 Vorsi				
16 Versi	on			
Description code	on Numeric code			

